	VC-Dot HP - Maintenance Schedule										Revision A											
		Installation hours												_								
		2000 hrs	4000 hrs	6000 hrs	8000 hrs	10000 hrs	12000 hrs	14000 hrs	16000 hrs	18000 hrs	20000 hrs	22000 hrs	24000 hrs	26000 hrs	28000 hrs	30000 hrs	32000 hrs	34000 hrs	36000 hrs	38000 hrs	40000 hrs	Note
F i x t u r	Lens	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	Clean according to Note 1)
	Fixture enclosure	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	I/C	Clean according to Note 1)
	Pressure relief valve (GoreTex membrane sticker)	I/C	I/C	I/C	I/R	I/C	I/C	I/C	I/R	I/C	I/C	I/C	I/R	I/C	I/C	I/C	I/R	I/C	I/C	I/C	I/R	Clean according to Note 1)
	Installation mounting	1	I	I	I	I.	I	I	I	I	I	I	1	ı	I	ı	I	I	1	ı	1	Inspect and tighten if necessary

## Legend

Cells with red fill is for certified Martin Technicians only! Failure to comply will result in warranty void.

Cells without fill can be performed by end-users.

## Conditions

Ambient temperature	Max 55 °C (131 ° F) Min -20 °C (-4 ° F)					
Daily Lamp on Hours	24					
Voltage / frequency	Within specified range for the product					

1)

To clean the product, use warm water and a soft brush or a low-pressure or medium-pressure water jet. Use car shampoo to help remove dirt and grease. If possible, dry with a soft cloth to avoid streaking. Do not use a stiff brush or scouring pad. Do not use solvents or abrasives.

Make sure that the pressure relief valve is clean and unblocked.

For futher information read the user manual regarding cleaning and pressure relief valve.

Ignoring service and maintenance schedules will result in warranty void!

## Code

ı	Inspect						
R	Replace						
С	Clean						
L	Lubricate						
Α	Adjust						
U	Update						